- (a) A description of the transfer system including mooring areas, transfer connections, control rooms, and diagrams of the piping and electrical systems:
- (b) The duties of each person assigned for transfer operations;
- (c) The maximum relief valve setting or maximum allowable working pressure of the transfer system;
- (d) The facility telephone numbers of facility supervisors, persons in charge of shoreside transfer operations, personnel on watch in the marine transfer area for LNG, and security personnel;
- (e) A description of the security systems for the marine transfer area for LNG;
  - (f) The procedures for-
- (1) Transfer operations including gauging, cool down, pumping, venting, and shutdown;
- (2) Transfer operations start-up and shutdown;
  - (3) Security violations; and
  - (4) The communications systems; and
- (g) A description of the training programs established under §127.503.

[CGD 78-038, 53 FR 3376, Feb. 7, 1988, as amended by CGD 88-049, 60 FR 39796, Aug. 3, 1995]

## §127.307 Emergency Manual.

Each *Emergency Manual* must contain—

- (a) LNG release response procedures, including contacting local response organizations;
  - (b) Emergency shutdown procedures;
- (c) A description of the fire equipment and systems and their operating procedures;
- (d) A description of the emergency lighting and emergency power systems;
- (e) The telephone numbers of local Coast Guard units, hospitals, fire departments, police departments, and other emergency response organizations:
- (f) If the waterfront facility handling LNG has personnel shelters, the location of and provisions in each shelter;
- (g) First aid procedures and if there are first aid stations, the locations of each station; and

(h) Emergency procedures for mooring and unmooring a vessel.

[CGD 78-038, 53 FR 3376, Feb. 7, 1988, as amended by CGD 88-049, 60 FR 39796, Aug. 3, 1995]

## § 127.309 Operations Manual and Emergency Manual: Use.

The operator shall ensure that—

- (a) LNG transfer operations are not conducted unless the waterfront facility handling LNG has an examined *Operations Manual* and examined *Emergency Manual*;
- (b) Each transfer operation is conducted in accordance with the examined *Operations Manual*; and
- (c) Each emergency response is in accordance with the examined *Emergency Manual*

[CGD 78-038, 53 FR 3376, Feb. 7, 1988, as amended by CGD 88-049, 60 FR 39796, Aug. 3, 1995]

## §127.311 Motor vehicles.

- (a) The operator shall designate and mark parking spaces that—
- (1) Do not block fire lanes:
- (2) Do not impede any exits;
- (3) Are not located in any impounding space; and
- (4) Are not within 15 meters (49.2 feet) of any storage tank or loading flange.
- (b) During transfer operations, no person may—
- (1) Stop or park a motor vehicle in a space that is not designated a parking space; or
  - (2) Refuel any motor vehicle.

## §127.313 Bulk storage.

- (a) The operator shall ensure that only the following flammable materials are stored in the marine transfer area for LNG:
  - (1) LNG.
  - (2) LPG.
  - (3) Vessel fuel.
  - (4) Oily waste from vessels.
- (5) Solvents, lubricants, paints, and other fuels in the amount used for one day's operations and maintenance.
- (b) Flammable liquids must be stored accordance with Chapter 4 of NFPA

[CGD 78-038, 53 FR 3376, Feb. 7, 1988, as amended by CGD 88-049, 60 FR 39796, Aug. 3, 1995]