until the LPG vessel passes the seaward extremity of the Aransas Pass Jetties.

- (b) The general regulations governing safety zones contained in 33 CFR 165.23 apply.
- (c) The Captain of the Port will notify the maritime community of periods during which this safety zone will be in effect by providing advance notice of scheduled arrivals and departures of loaded LPG vessels via a Marine Safety Information Broadcast Notice to Mariners.

[CGD 8-84-07, 50 FR 15744, Apr. 22, 1985; 50 FR 19933, May 13, 1985]

## § 165.809 Security Zones; Port of Port Lavaca-Point Comfort, Point Comfort, TX and Port of Corpus Christi Inner Harbor, Corpus Christi, TX.

- (a) *Location*. The following areas are designated as a security zone:
- (1) Port of Port Lavaca-Point Comfort—all waters between the Dredge Island Bridge at 28°39′30″ N, 96°34′20″ W and a line drawn between points 28°38′10″ N, 96°33′15″ W and 28°38′10″ N, 96°34′45″ W including the Point Comfort turning basin and the adjacent Alcoa Channel. These coordinates are based upon NAD 1983.
- (2) Port of Corpus Christi Inner Harbor—all waters of the Corpus Christi Inner Harbor from the Inner Harbor Bridge (US HWY 181) to, and including the Viola Turning Basin.
- (b) Regulations. (1) No recreational vessels, passenger vessels, or commercial fishing vessels may enter these security zones unless specifically authorized by the Captain of the Port Corpus Christi or his designated representative.
- (2) Recreational vessels, passenger vessels and commercial fishing vessels requiring entry into these security zones must contact the Captain of the Port Corpus Christi or his designated representative. The Captain of the Port may be contacted via VHF Channel 16 or via telephone at (361) 888–3162 to seek permission to transit the area. If permission is granted, all persons and vessels must comply with the instructions of the Captain of the Port, Corpus Christi or his designated representative.

(3) Designated representatives include U.S. Coast Guard commissioned, warrant, and petty officers.

(c) Authority. In addition to 33 U.S.C. 1231, the authority for this section includes 33 U.S.C. 1226.

[COTP Corpus Christi-02-003, 67 FR 64046, Oct. 17, 2002]

## § 165.810 Mississippi River, LA-regulated navigation area.

- (a) Purpose and applicability. This section prescribes rules for all vessels operating in the Lower Mississippi River below mile 233.9 above Head of Passes including South Pass and Southwest Pass, to assist in the prevention of allisions; collisions and groundings so as to ensure port safety and protect the navigable waters of the Mississippi River from environmental harm resulting from those incidents, and to enhance the safety of passenger vessels moored or anchored in the Mississippi River.
- (b) Lower Mississippi River below mile 233.9 above Head of Passes including South and Southwest Passes:
- (1) Supervision. The use, administration, and navigation of the waterways to which this paragraph applies shall be under the supervision of the District Commander, Eighth Coast Guard District.
- (2) Speed; high-water precautions. When passing another vessel (in motion, anchored, or tied up), a wharf or other structure, work under construction, plant engaged in river and harbor improvement, levees withstanding flood waters, building partially or wholly submerged by high water, or any other structure liable to damage by collision, suction or wave action, vessels shall give as much leeway as circumstances permit and reduce their speed sufficiently to preclude causing damages to the vessel or structure being passed. Since this subparagraph pertains directly to the manner in which vessels are operated, masters of vessels shall be held responsible for strict observance and full compliance therewith. During high river stages, floods, or other emergencies, the District Commander may prescribe by navigation bulletins or other means the limiting speed in land miles per hour deemed necessary for the public